

 
# Tigra

## Quick Reference Guide

Refer to Owner's Manual for detailed information.


Note: some items described may be optional \*.

### Instruments and controls

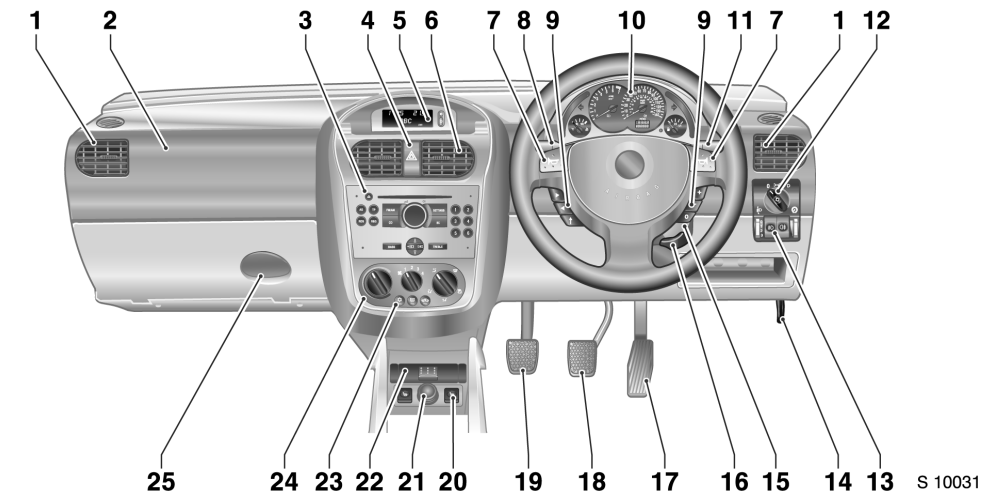


1. Side air vents
2. Front passenger's airbag
3. Infotainment system \*
4. Hazard warning lights, LED for Vauxhall alarm system \*
5. Display for time, date, outside temperature, trip computer \*, Infotainment system \*
6. Centre air vents
7. Horn
8. Turn signal lights, headlight flash, dipped and main beam, cruise control \*, door-to-door lighting
9. Remote control for Infotainment \*
10. Instruments
11. Windscreen wiper and wash system
12. Parking lights, dipped beam
13. Headlight range adjustment, fog tail light, front fog lights \*, instrument illumination
14. Bonnet release lever
15. Starter switch & steering column lock
16. Steering wheel adjustment
17. Accelerator pedal
18. Brake pedal
19. Clutch pedal
20. Heated front seats \*
21. Accessory socket or cigarette lighter
22. Ashtray \*
23. Air conditioning system \*, heated rear window, air recirculation system
24. Climate control
25. Glove compartment

### Vehicle security

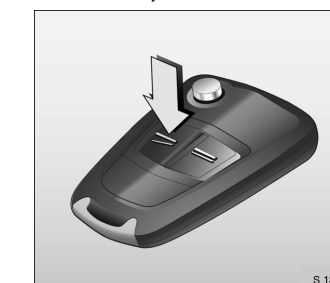 


**Unlocking:**  
**Unlock driver's door only:**  
 Press button on remote control once.

 **Unlock entire vehicle:**  
 Press button on remote control twice - or - turn key in driver's door lock towards front of vehicle, turn key back to the vertical position and remove.

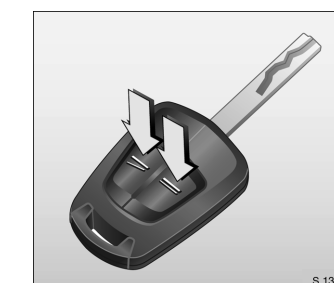


**Locking:**  
 Press button on remote control - or - turn key in driver's door lock towards rear of vehicle, turn key back to the vertical position and remove.  
 To lock from inside, press central locking switch in the driver's door trim with the doors closed.

 **Electronic immobiliser**  
 ■ Deactivated when key is in ignition  
 ■ Activated when key is removed  
**Engine cannot be started in any other way, so keep spare key in a safe place!**

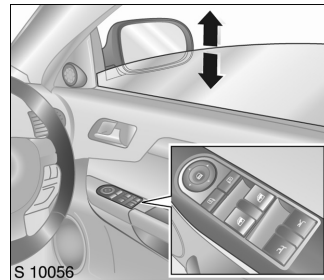

**Electrically operated door windows: Switches on driver's door**  
 Ready for operation with ignition on. For incremental operation, briefly pull or press the switch. For automatic opening or closing, pull or press switch for longer. Pull or press again to stop.

 Automatic closing is not possible during Retractable steel roof operation.

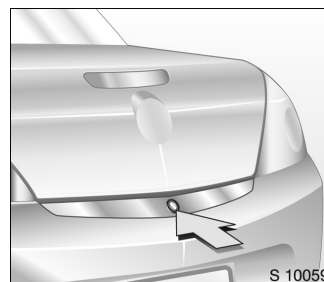


**To close:**  
 Press and hold the button below the luggage compartment lid until it is completely closed.

A tone will sound to indicate that the luggage compartment lid is closed and locking is indicated by a single flash of the hazard warning lights.



 To open completely, locate safety catch - about a handsbreadth to the right of the bonnet centre - as viewed from the front: Raise and open the bonnet.

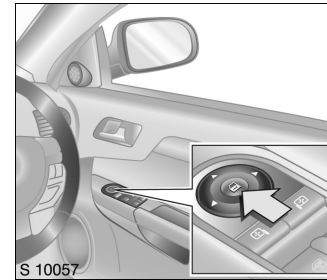


**Central locking switch for locking and unlocking the doors from inside the vehicle:**  
 Press button in driver's door: Doors are locked or unlocked.

With anti-theft locking system \* activated, doors cannot be unlocked with this button.


**Note** that unintentional actuation could cause being locked out.

**To close (continued):**  
 Releasing the button before the luggage compartment lid is closed will interrupt operation.

 Automatic luggage compartment lid operation is only functional if the Retractable steel roof has been completely and properly closed or opened beforehand.

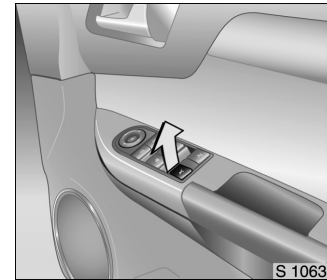

 **Luggage compartment**  
**To unlock:**  
 Press button on remote control twice, (unlocks entire vehicle) - or - open using button in driver's door: with the ignition on and the handbrake applied, press button in door trim - or - briefly press button below luggage compartment lid. The opening process begins after a slight delay.

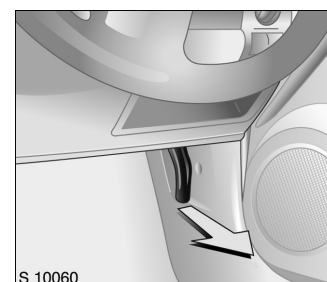


**Bonnet:**  
 To open the bonnet, pull the release lever located below the instrument panel on the driver's side. The bonnet will then be unlocked and will partially open. Return release lever to its original position.

Any dirt or snow on the bonnet can slide down towards the windscreen when the bonnet is opened and block the air intake. For more information, see Owner's Manual.

To hold the bonnet in the open position, insert the support rod located at right angles above the radiator grille into the small slot in the underside of the bonnet, at its front edge.

Before closing bonnet, press support rod firmly into its retainer. Lower the bonnet gradually and then allow it to fall into the lock under its own weight.

 Check that the bonnet is locked in position by pulling at its front edge. If it is not engaged, repeat the procedure.

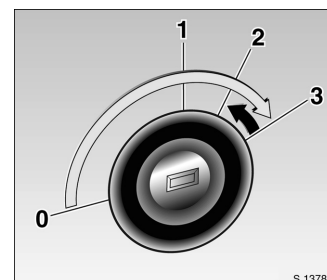

**Starting the engine:**  
**Easytronic \* in N,**  
**Petrol engines:** Gearshift lever in neutral with clutch depressed. Depress foot brake, do not accelerate. Turn key to 3.  
**Diesel engines:** Gearshift lever in neutral with clutch depressed. Depress foot brake, do not accelerate. Turn key to 2. When preheating control indicator goes out <sup>1)</sup>, turn key to 3.  
<sup>1)</sup> Preheating system switches on only if outside temperature is low.

**Tyre pressures:**  
 Check tyre pressures, including spare wheel, every 14 days and prior to any long journey; tyres should be checked when cold. Use valve cap key to make unscrewing valve caps easier.


**Tyre pressures (psi) for 1 person and light luggage loads.**

 Engine	Tyres	Front	Rear
Z 14 XEP,	185/55 R15	36	33
Z 18 XE,	185/60 R15	33	30
Z 13 DT	205/50 R16	33	30
	205/45 R17	33	30


Spare wheel \* 36 36

**Engine oil:**  
 Check every 300 miles or prior to long journeys.

**Important:**  
 It is the owner's responsibility to maintain the correct level of an appropriate quality oil in the engine.

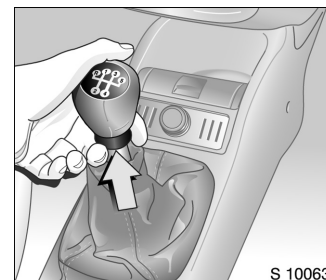

 **Manual transmission:**  
 Reverse gear: with vehicle stationary, pull the ring up 3 seconds after declutching and engage gear.  
 If the gear does not engage, set the lever in neutral, release the clutch pedal and depress again; then repeat gear selection.

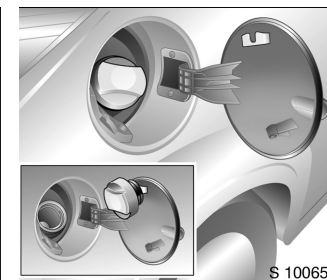

**Refuelling:**  
 Open tank flap, unscrew fuel filler cap, remove and suspend from tank flap. The fuel tank has a limiting system which prevents overfilling of the tank.

To close, position fuel filler cap and rotate past resistance until cap audibly clicks over retainer. Close tank flap and wipe off any overflowing fuel.


Use unleaded fuel for petrol engines  
 Fuel tank capacity - 45 litres.

**Tyre pressures (psi) for full loads.**

 
Engine	Tyres	Front	Rear
Z 14 XEP,	185/55 R15	36	33
Z 18 XE,	185/60 R15	33	30
Z 13 DT	205/50 R16	33	30
	205/45 R17	33	30

Spare wheel \* 36 36


## Vehicle features

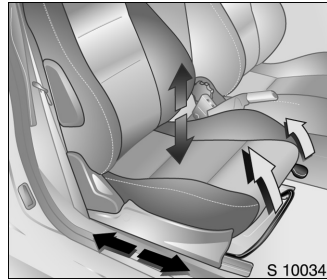

 
**Seat adjustment:**  
Seat height  
Seat position  
**Important:** Do not sit nearer than 10 inches (25 cm) from steering wheel, to permit safe airbag deployment.

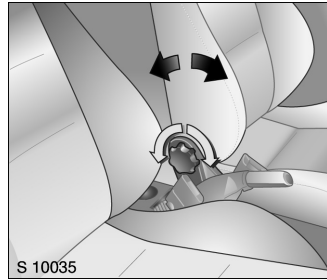

 **Seat adjustment (ctd.):**  
Seat backrest tilt  
Front seat backrest must not be tilted too far back (recommended maximum tilting angle approx. 25°).

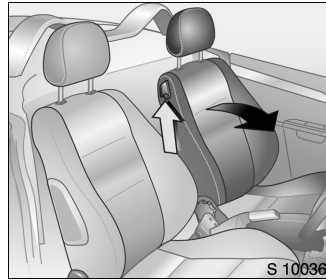

 
**Folding seat backrests:**  
Raise release lever.

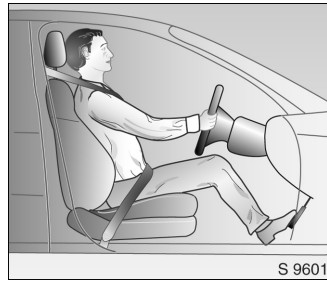

**Seating position:**  
Adjust driver's seat such that, with the driver sitting upright, the steering wheel is held in the area of its upper spokes with the driver's arms slightly bent. Push front passenger's seat as far back as possible.



 
**Head restraint position:**  
The middle of the head restraint should be at eye level. If this is not possible for extremely tall persons, set to highest position and set to lowest position for small persons.

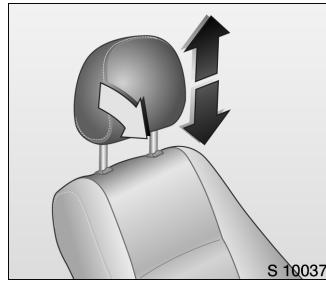


**Adjusting head restraint height:**  
Grip headrest at sides, tilt forward, hold and adjust height, engage.  
To remove head restraints:  
Release the two springs by pressing them and detach the head restraint.



 **Fitting seat belts:**  
The vehicle is equipped with three-point seat belts with automatic retraction and locking that provide full freedom of movement even though the belts are spring loaded and always lie snugly against the body when properly fitted.

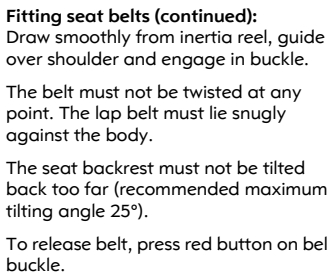


 **Fitting seat belts (continued):**  
Draw smoothly from inertia reel, guide over shoulder and engage in buckle.  
The belt must not be twisted at any point. The lap belt must lie snugly against the body.  
The seat backrest must not be tilted back too far (recommended maximum tilting angle 25°).  
To release belt, press red button on belt buckle.

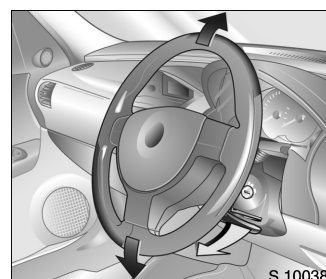


**Steering wheel adjustment:**  
Swivel lever down, adjust height, move lever up, engage.  
Adjust steering wheel only when vehicle is stationary and steering column lock is released.


## Vehicle features

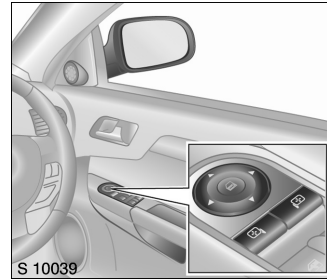 

 
**Adjusting exterior mirrors:**  
**Four-way switch on driver's door**  
Press switch for left or right-hand mirror: four-way switch operates the corresponding mirror.

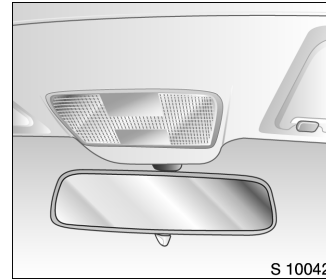

 
**Adjusting interior mirror:**  
Swivel mirror housing.

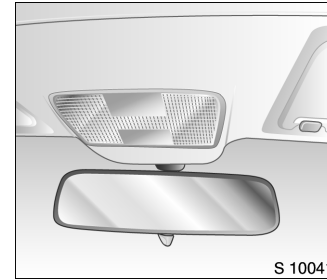

 **Reducing dazzle:**  
Swivel lever on underside of mirror housing to reduce dazzle at night.

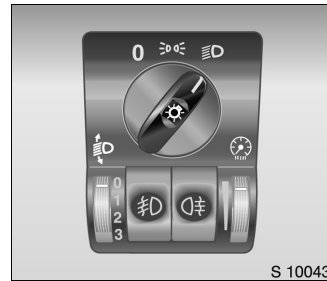

 
**Lighting switch:**  
0 Off  
☞ Parking lights  
☞ Dipped or main beam  
☞ Courtesy light (pull)  
☞ Front fog lights \* (press)  
☞ Fog tail light (press)

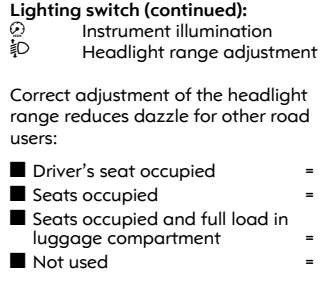


**Lighting switch (continued):**  
Instrument illumination  
Headlight range adjustment

Correct adjustment of the headlight range reduces dazzle for other road users:

 - Driver's seat occupied = 0
- Seats occupied = 1
- Seats occupied and full load in luggage compartment = 2
- Not used = 3

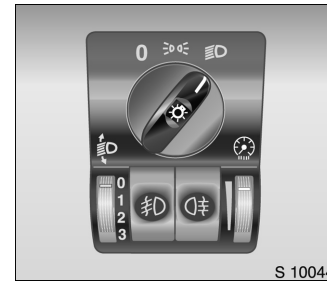


 **Headlight range adjustment:**  
With dipped beam switched on, adjust headlight range to suit vehicle load. Turn adjustment wheel to the required position.

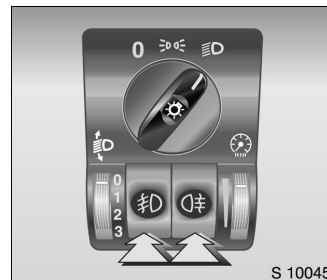

**Fog lights:**  
Front fog lights \*:  
Press ☞, ☞ illuminates in instrument panel. Press again to turn off.

 Fog tail light:  
Press ☞, ☞ illuminates in instrument panel. Press again to turn off.  
Ignition must be switched on and light switch in position ☞ or ☞.

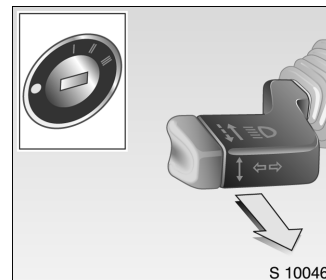


**Door-to-door lighting:**  
The dipped beam remains on for approx. 30 seconds after the driver's door is closed.

To activate  
■ Switch off ignition and remove key  
■ Open driver's door  
■ Pull turn stalk toward steering wheel.  
■ Close driver's door.  
If the driver's door is left open, the lights will go out after 2 minutes.




**Instrument illumination ☞, information display illumination:**  
Brightness can be adjusted when the exterior lights are on:  
Turn adjustment wheel until desired brightness is obtained.


## Vehicle features

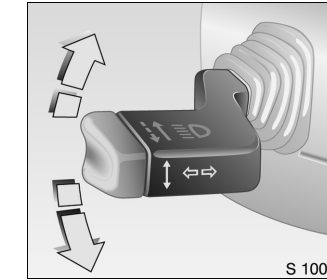 

 
**Operating turn signal lights:**  
Right = Stalk all the way up  
Left = Stalk all the way down  
Turn signal stalk returns to its original position after use. When steering wheel is straightened up, turn signal lights are automatically cancelled.

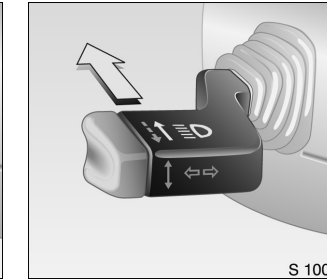

 
**Activating main or dipped beam:**  
Main beam = Move stalk forward  
Dipped beam = Stalk forward again  
Pull stalk towards steering wheel to operate headlight flash.

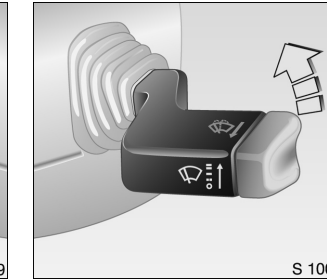

 
**Windscreen wiper:**  
Gently tap stalk upward  
○ = Off  
- - = Timed interval wipe  
- = Slow  
- - - = Fast

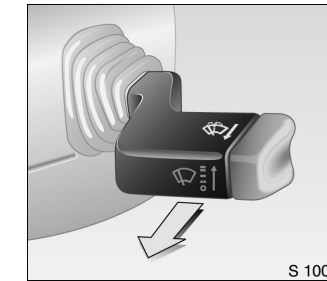

 
**Operating windscreen wash system and headlight wash system \*:**  
Pull stalk towards steering wheel. The wiper swipes for a few strokes.

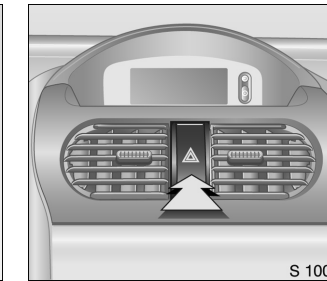

 
**Hazard warning lights:**  
On = Press ☞  
Off = Press ☞ again  
To aid location of the pushbutton, the red surface is illuminated with the ignition switched on.

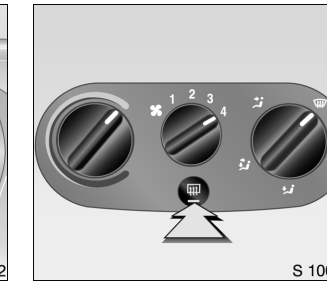

 **Heated exterior mirrors, heated rear window ☞:**  
Operational only with ignition switched on. Heating switches off automatically after approx. 15 mins.  
**Clearing misted or icy windows:**  
Set air distribution to ☞, turn temperature and fan switches clockwise. Activate heated rear window ☞. Open air vents and direct side air vents towards the windows.

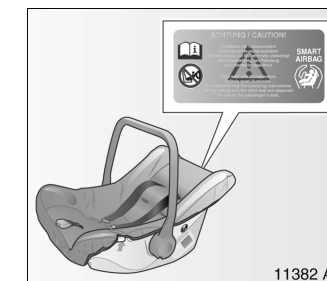

 **Vauxhall child restraint systems \*:**  
Child restraint systems with transponders \* can be fitted on the front passenger's seat; the use of systems without transponders poses a risk of fatal injury.

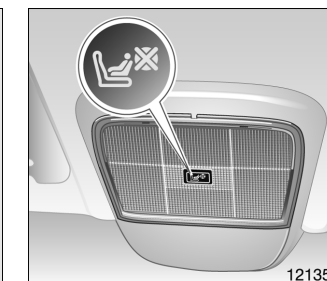

**Control indicator ☞ for Vauxhall child restraint systems with transponders \*:**  
Vauxhall child restraint systems with transponders can be identified by a sticker - see Fig. 11382 AQ.

**Continued.**  
The presence of a Vauxhall child restraint system with transponders \* is indicated after the ignition has been switched on, by permanent illumination of the control indicator ☞, as soon as the seat occupancy recognition system has detected the child restraint system.

If the control indicator ☞ does not illuminate whilst driving, the passenger's seat front and side airbags are not deactivated and there is a life-threatening risk to the child; fit child restraint system to rear seat. For more information see Owner's Manual.